RUPP MARINE INC
PORT SALERNO, FL.

Installation Guide for A0-TPGN-STNG STINGERS

1. **Read instructions completely.**
2. **Determine where the units are to be mounted.**
   - **Units can be mounted on T-Tops or Gunnel or any flat surface suitable for fishing.**
3. **Remove the Mounting Flange, use the Mounting Flange as a drill template for installation.**
4. **Drill Size should be clearance for 1/4-20.**
5. **Once the position has been established, determine if an wedge plate is needed to position the A0-TPGN-STNG as near to vertical as possible.**
6. **The 17-1510-50 Wedge is 10 degrees and is available from Rupp Service.**
7. **If a custom wedge or bolster plate is required it is recommended to use starboard for the fabrication.**

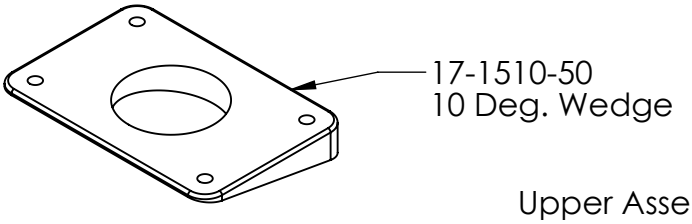

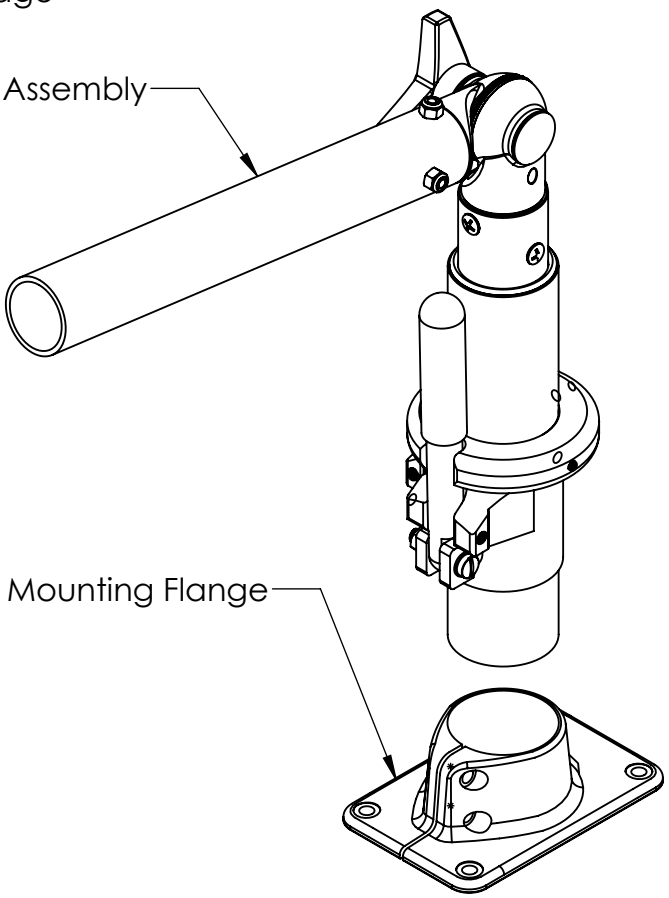

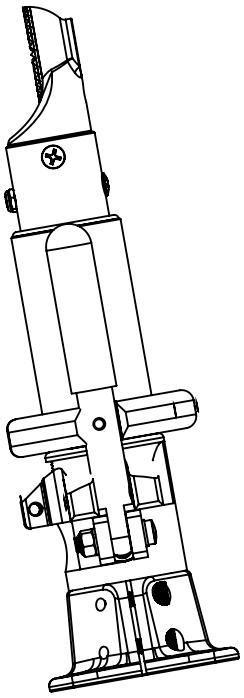

Off of Vertical

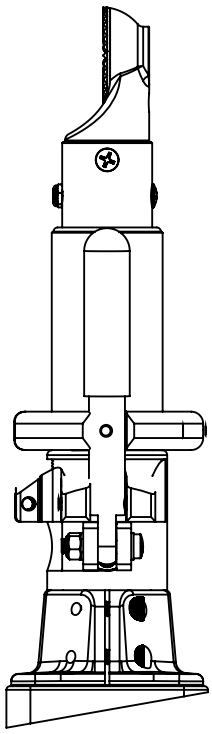

10 deg Wedge

RUPP MARINE INC
PORT SALERNO, FL.

1. Secure the Mounting Flange to the desired position.
2. Insert the Upper Asssembly into the Mounting Flange and secure.

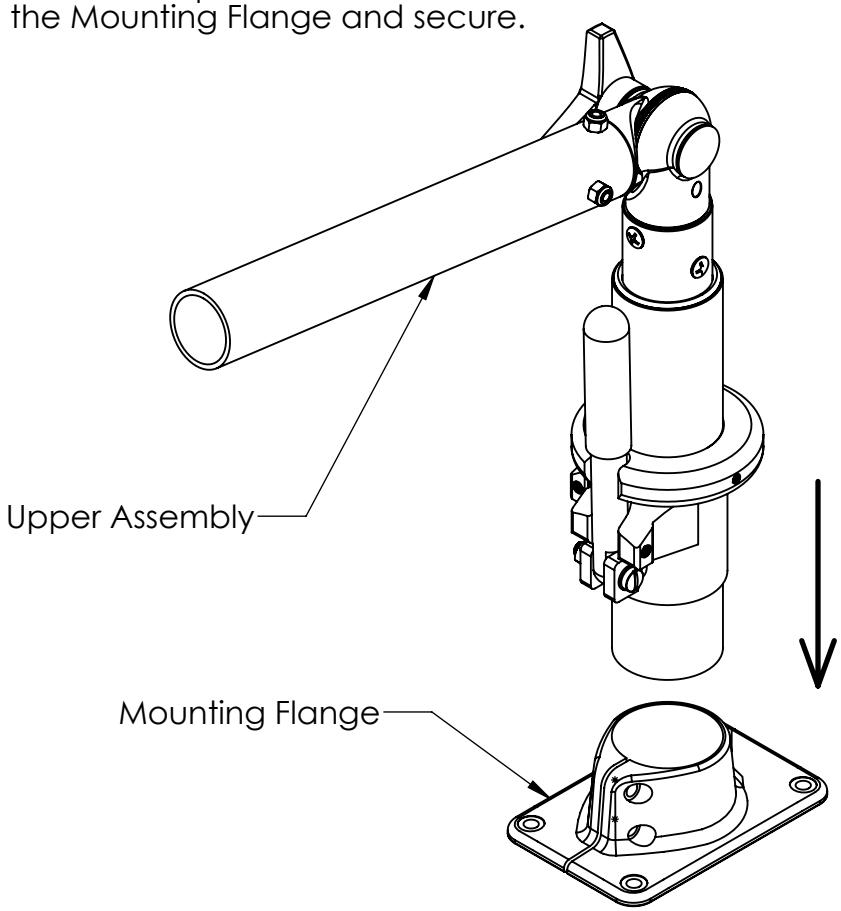

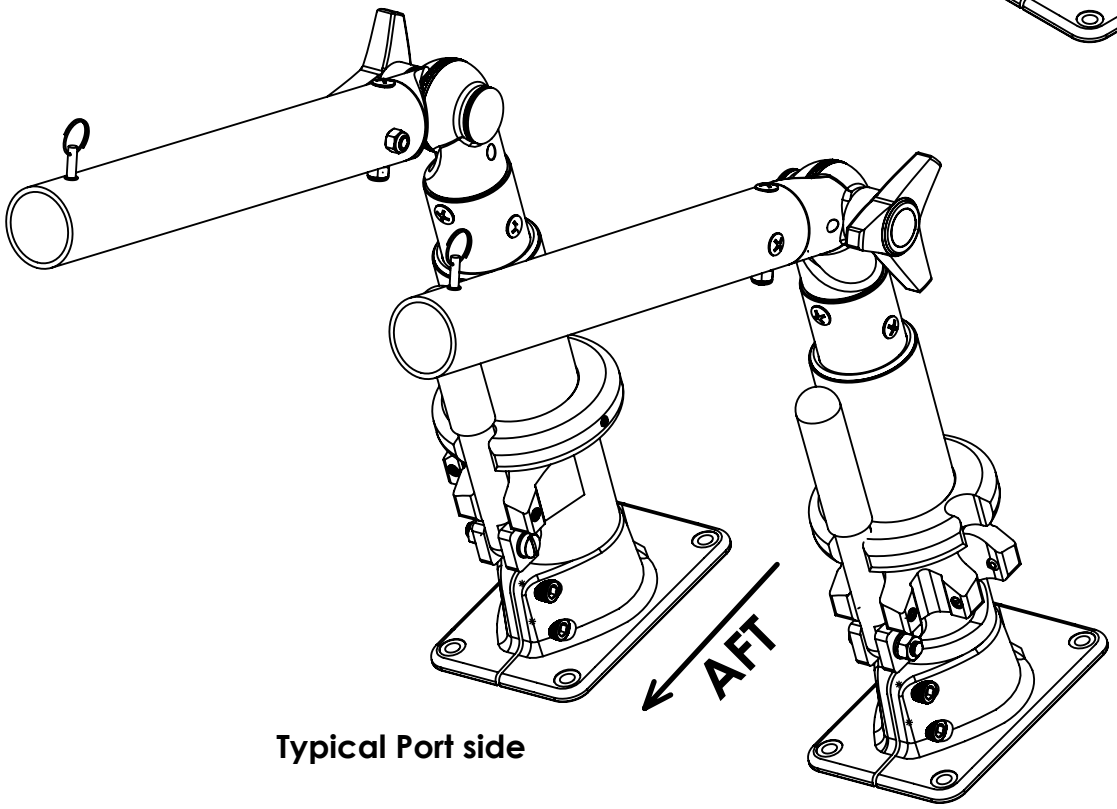

Typical Port side

Typical Starboard side